



Line Status Indicators on Graphical Display

Icon	Status
	Idle/Available
	In use/Busy
	On Hold
	New Voice Mail
	Call Forwarding Enabled
	Offline/not functioning
	Ringing Inbound
	Dialing Outbound
	Do Not Disturb Enabled

